 


NEW GENERATION PUNCH & DIE PULLER

FAST, EASY, & VERSATILE

New Generation Punch & Die Puller

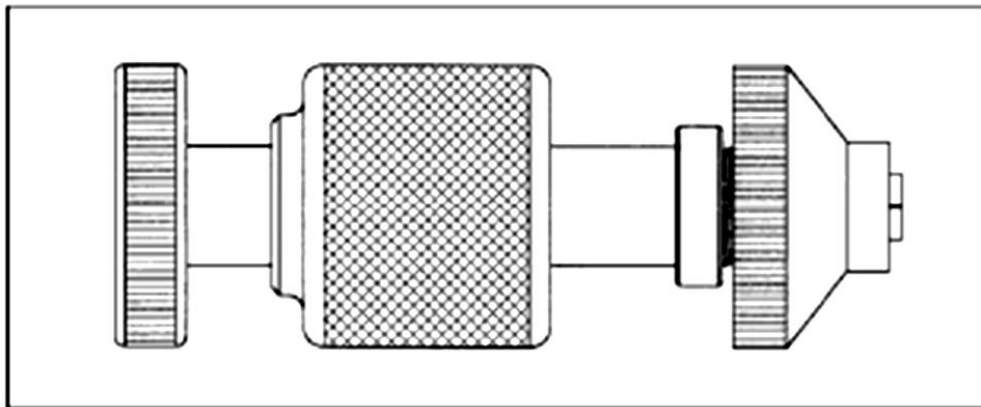

Removes even the most stubborn punches & dies!

No extra tooling required

Strong slide hammer action

Very quick to set up and use



 
RM (Rotary) Services Ltd
New Lane
Havant Hants
PO9 2LT
United Kingdom

T: 023 9249 2360
F: 023 9249 2544
E: sales@rmrotary.co.uk
www.rmrotary.co.uk

Punch & Die Puller Technical Information

To Order:

Ask for assembly SP1646

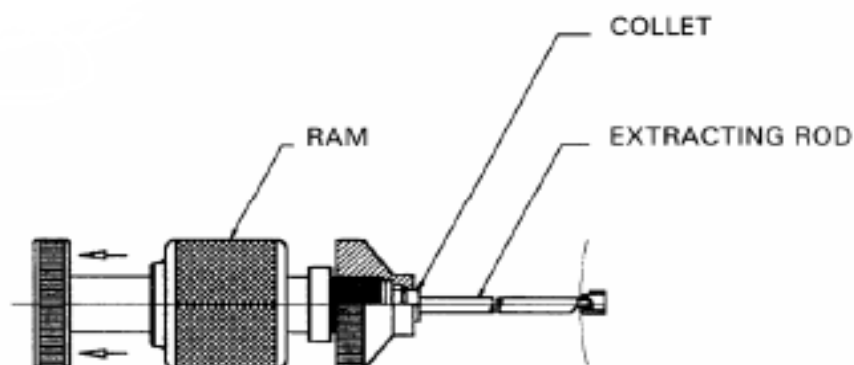


For Die Removal

Die removal is easy! With special* collet & extracting rod, just follow these 4 simple steps;


1. Insert collet into puller & extracting rod into collet and tighten.
2. Insert extracting rod at approximately 45° into the die as shown.
3. With the rod tip/hook in the die lift the puller into a horizontal position.
4. Slide the ram in the direction of the arrows to extract the die.

 * Puller comes with 4mm (5/32") collet for punch and die extraction.

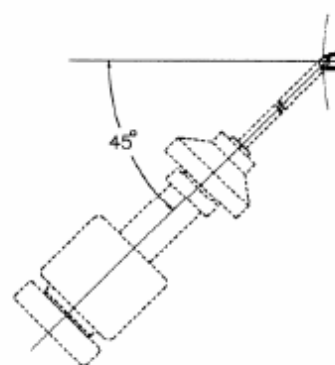

For Punch Removal

 5. Insert punch end directly into collet supplied & tighten.
6. Slide ram in direction of arrows.

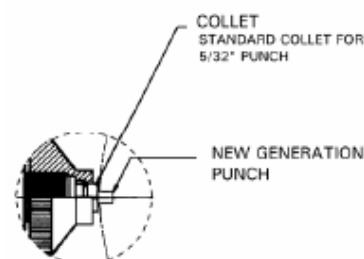

RM (Rotary) Services Ltd
New Lane
Havant Hants
PO9 2LT
United Kingdom

T: 023 9249 2360
F: 023 9249 2544
E: sales@rmrotary.co.uk
www.rmrotary.co.uk